

702 WALL JACK INSTRUCTIONS:

Page 1.

SELECTING A 2X4 POLE:

- 1) Wall Jacks are designed to work on a standard 2x4 (measuring 1-1/2" x 3-1/2") made from clear, straight grained fir wood.
- 2) The minimum pole length should be determined from the chart below.

Wall Height	8FT	9FT	10FT	12FT
Pole Length	14FT	15FT	16FT	20FT

MOUNTING WALL JACK ON POLE:

- 1) Guide Wall Jack on to pole by sliding upper gripper first through wood pole.
- 2) When 2x4 is protruding approx. 2" beyond upper gripper, flex upper gripper spring by putting pressure on 2x4. Then slide 2x4 between upper rear roller and upper front rod.
- 3) Continue to slide 2x4 through lower gripper to a distance of 2". Flex lower gripper spring by putting pressure on 2x4.
- 4) Continue to slide 2x4 behind lower rod and roller. All grippers should now be binding on wood pole.

RAISING THE WALL OR BEAM:

- 1) Place lifter hook under wall or beam to be lifted.
- 2) With 2x4 pole pointing upward to sky and lifter hook in place under wall or beam to be lifted, nail a 2x4 cleat behind bottom of all poles to prevent slippage of all lifter poles.
- 3) Place another Wall Jack at the other end of wall to be raised and place intermediate Wall Jacks in place. There should not be more than 8 ft between Wall Jacks.
- 4) Raise wall by moving pump handle mechanism up and down. Each stroke to pump handle should move Wall Jack approx. 3-1/2". Raise all Wall Jacks together.
- 5) As Wall is raised in position, Wall Jack Pole will approach a 45 degree angle to raised wall.

RELEASING THE WALL JACK:

- 1) Secure wall or beam in desired position before releasing Wall Jack.
- 2) Wall Jack may be removed from wood pole by continuing to pump handle until Wall Jack travels off end of pole.
- 3) Wall Jack may also be removed from pole by removing the upper square lock key and holding lower gripper key open and pulling Wall Jack down to starting position.

CARE AND MAINTENANCE:

Page 2:

- 1) Inspect all scaffolding equipment before and after each use to be sure no damage or deterioration has taken place. If any rusting or other deterioration takes place, discard at once.
- 2) Always handle scaffolding equipment with care to insure safe and lasting use. Do not throw or drop equipment from a building or on to a truck.
- 3) If equipment that has been exposed to extreme heat or cold, discard at once.
- 4) Do not use hammer to force scaffolding equipment to operate. Re-read instructions for proper operation.

CAPACITY:

500 lbs when used with clear, straight grained fir wood poles, free from all knots and defects. Space Jacks no more than 8 ft apart.

WARNING:

Failure to read and follow instructions on the use of this product could result in serious personal injury. This product must be used in strict compliance with Federal OSHA Regulations.

